

## Subject:

Hardware:

**Effective Date:** 

Bulletin No. : Date:

## Software:

| Configuration Wizard - 3.0.3.1         |   |
|--|---|
| NFIGURATION WIZARD                     | VIEW ON-SCREEN KEYBOARD VIEW HELP GUIDE (I      |
| etting Up EFT-Client                   |   |
| lit EFT-Client settings and click on n | d to continue                                   |
| Pinpad p                               | rt: USB -                                       |
|  |   |
| Pinpad modem/printer configura         | ion   |
| □ I want the to use the pinpad's inte  | nal modem/GPRS as my fallback link to the bank. |
| □ I want to use the pinpad's interna   | printer as my EFTPOS printer.                   |
| ☑ I want to use the pinpad's interna   | nodem/GPRS as my primary link to the bank.      |
|  |   |
|  |   |
|  | 'Primary link to the bank                       |
| ☐ View advanced settings               | option now appears last                         |
|  | 0 0   |

Making Payments Simple.

www.skyzer.co.nz +64 9 259 0322